


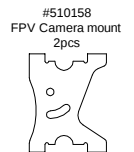
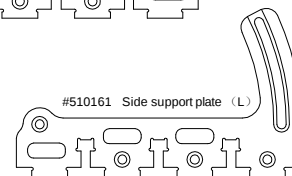
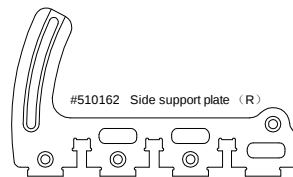

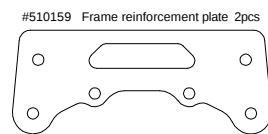
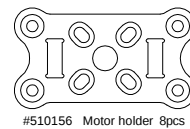
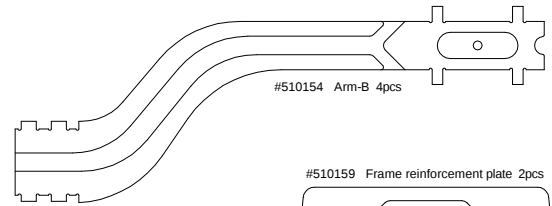
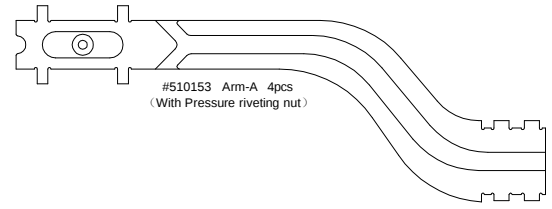
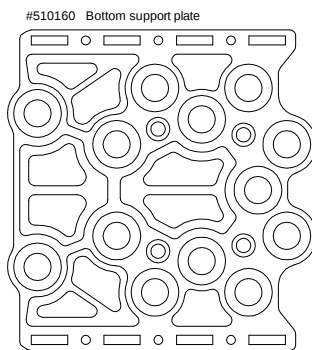
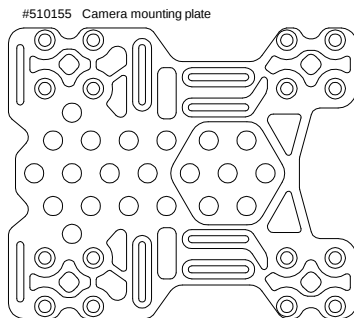
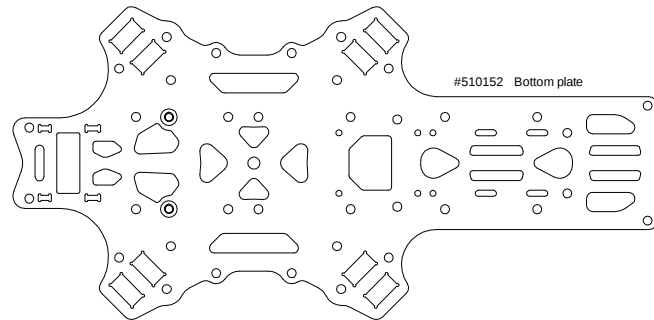
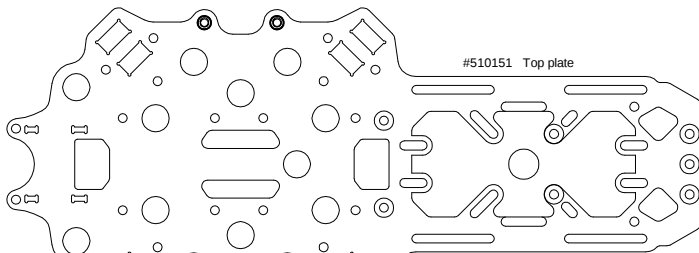


Kopis Cinematic X8 Assembly Guide


PART LIST



#31094 TPU 3D print set 24pcs

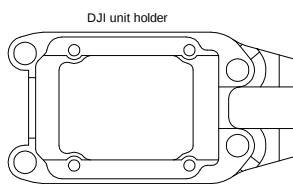

Gummie M8 12pcs

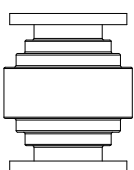

Nylon stud M3*7 4pcs



Nylon stud M3*5 4pcs



Locknut M3 14pcs



Screw M3*22 8pcs



Flat head screw M3*8 4pcs



Screw M3*8 32pcs



Socket cap screw M3*8 42pcs



Screw M3*16 8pcs




Screw M3*12 14pcs



Gummie M3 8pcs



Aluminum standoffs M3*22 34pcs




Hand screw M3*6 2pcs




Aluminum standoffs M3*100 4pcs


1

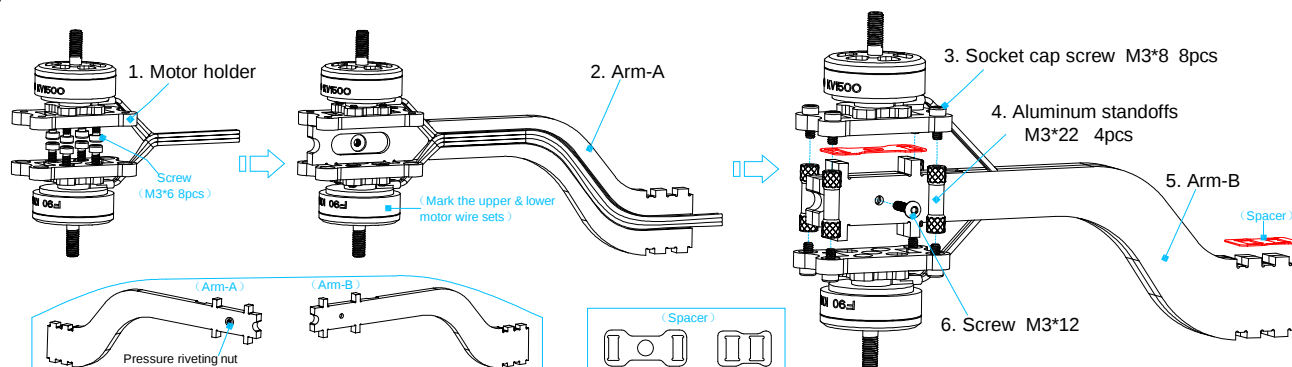

2

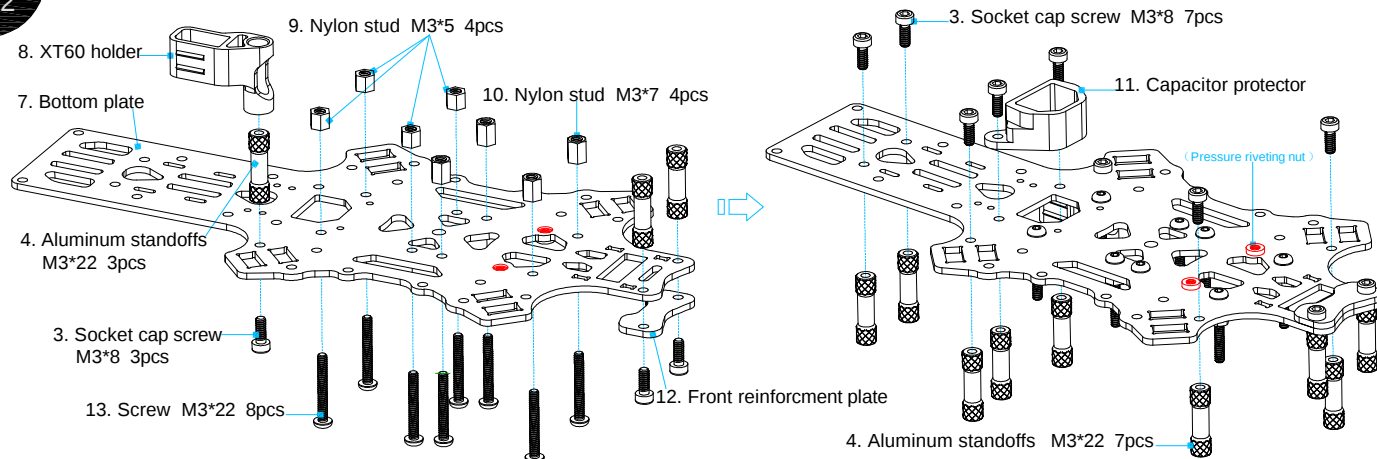


3

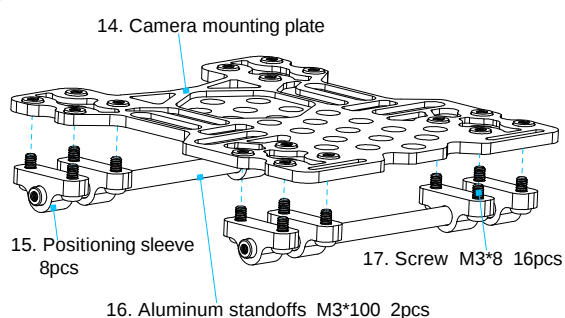

4

(Finish tighten these 10 screws at the end of the assembly.)

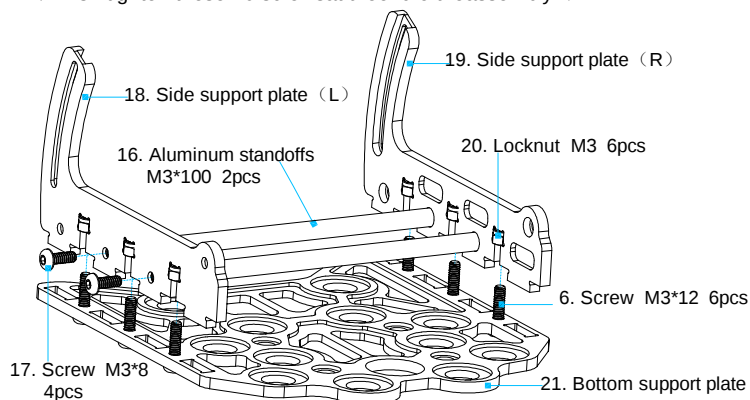

5

